

STARKE **ARVID**

Instructions for Use

Lift Truck



Dear Customer!

Thank you for choosing a STARKE ARVID® product.

We have more than 25 years of experience within the construction business. We develop, manufacture and sell equipment intended for professional material management. Starke Arvid´s product assortment includes a total of 20 different products.

Browse in at www.starkearvid.se

General use and safety regulations:


- Check the pusher brake as well as the tires before use.
- Be especially careful when driving downhill with a full load.
- Be attentive to pinning risks when raising the spacers.
- Maximum load must not be exceeded.
- Place the load centrally on the truck.
- Use the necessary safety equipment.
- When lifting with a cargo loader or crane, place the forks or sling directly under the platform´s frame in order to avoid damages to the steering connecting rod. The truck should lift at maximum raised position in order to avoid air entering the hydraulic system.

General maintenance and care instructions:


- All mobile parts must be greased once a month.
- Check all mobile parts as well as welding joints, wheels and other material at least once a year.
- Remove any outer rust and coat with anti-corrosive paint..
- Replace worn parts.
- When unsure, contact Alia AB.

User Instructions:


- Place the load evenly distributed on the platform both length-wise and sideways.
- Raise the spacers so that even a third of the trestle can be used.
- Drive with the load in a lowered position with consideration to the truck´s stability.
- Never walk in front of a loaded trolley while in a downhill inclination.
- Be very careful when driving down inclines considering the pushing effect of the load.
- Be careful when making sharp turns since the truck has a very abrupt load radius.
- Be careful with the positioning of the trestles when unloading.
- The draw-handle´s 3 pumping function positions:
 - In the lowered position the pumping function is connected.
 - In the middle position the pumping function is neutral.
 - In the raised position the platform/load is lowered.

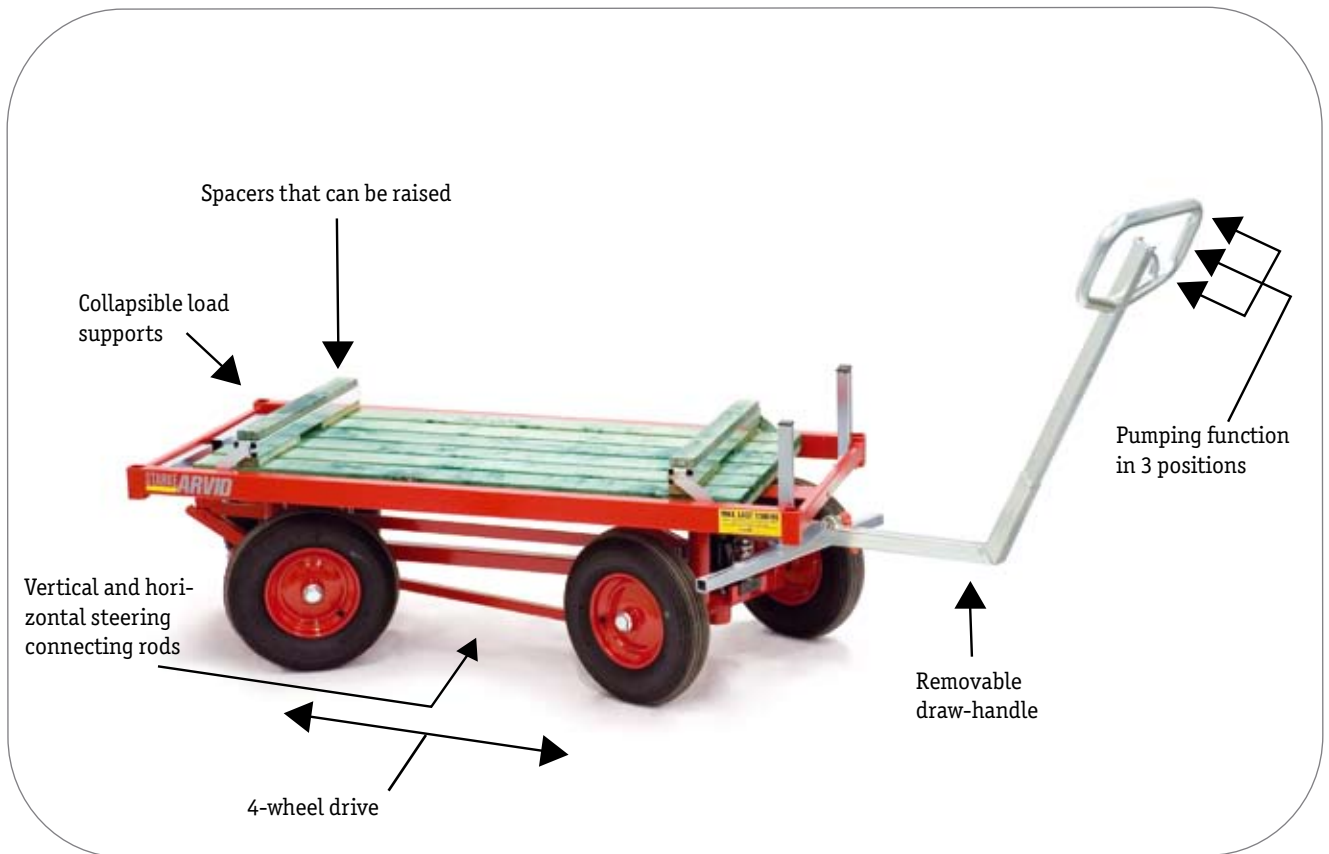

When lifting with a loading machine or crane, place the forks or sling directly under the platform's frame in order to avoid damages to the steering connecting rod. The skip should be lifted at maximum hoist level in order to avoid air entering into the hydraulic system.

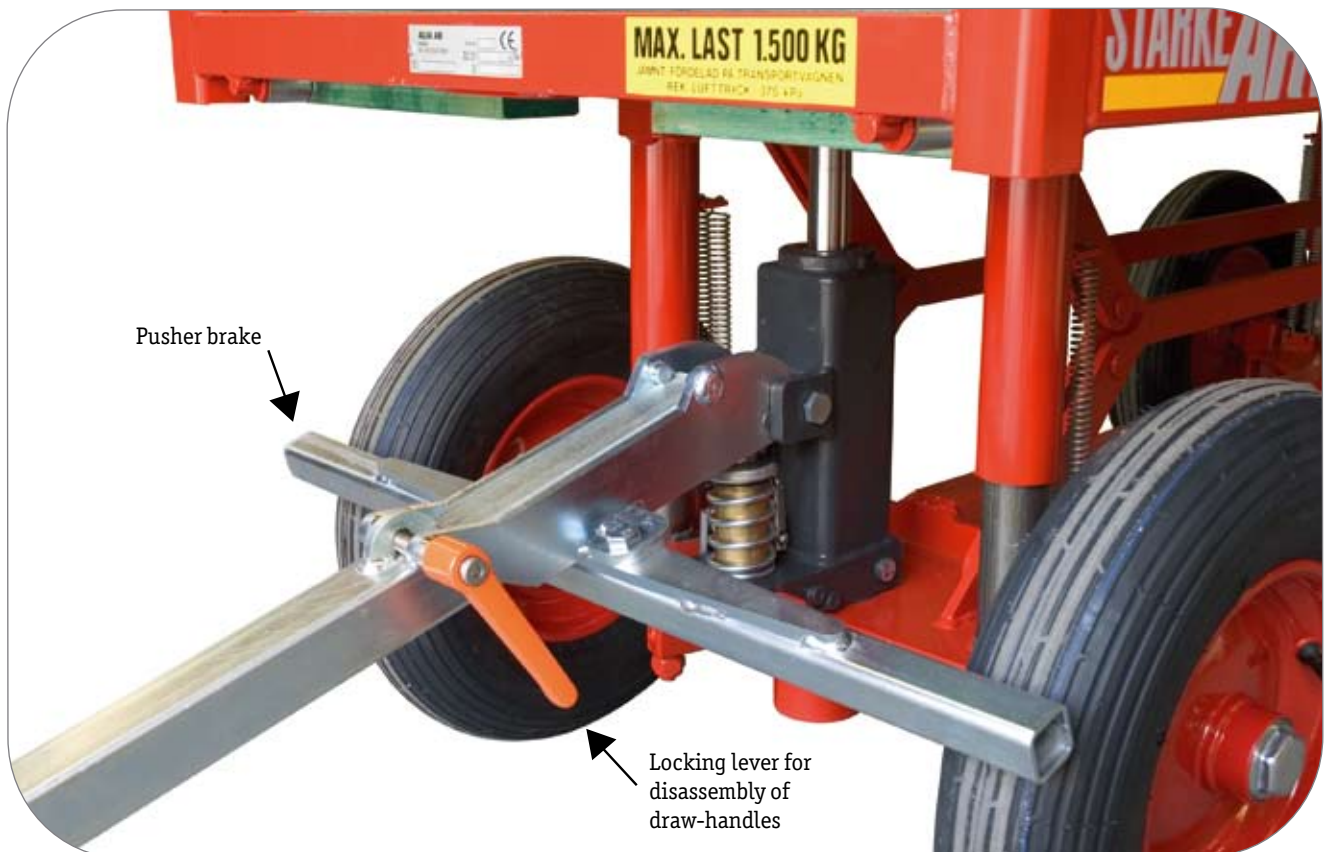

Adjustment of the hydraulic system

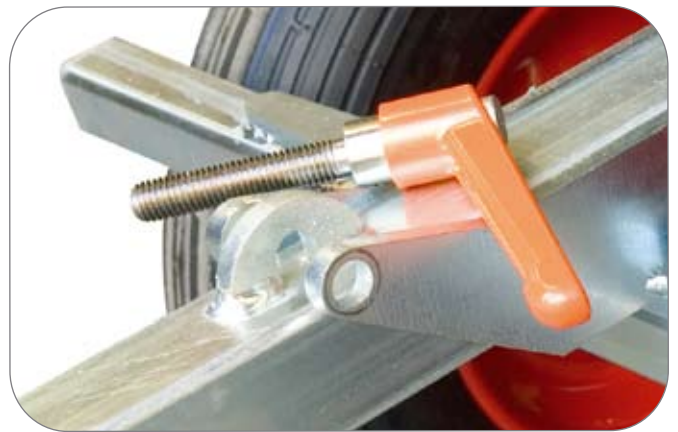

Technical Data

Lift Truck

Extra Equipment:

Article no:	18400	Collapsible load supports
Maximum load:	1500 kg	
Width:	700 mm	
Length:	1620 mm	
Length of draw handle:	1100 mm	
Min. platform height:	490 mm	
Max. platform height:	650 mm	
Weight:	155 kg	
Wheels (type):	(polyurethane-filled)	
	4off 4.00x8"	
	8-layered	

Service/Extra parts:

A number of retailers for STARKE ARVID® products are available for your basic security. If you have any questions regarding service or extra parts turn to you nearest retailer or directly to ALIA AB.

Gaurantee:

Under the condition that all instructions for use have been followed, we offer a one-year guarantee according to NL 01.
The product may not be modified by the user.

*Produced and
marketed by:*

Alia AB
Box 93
SE-459 22 LJUNGSKILE

Phone: +46-(0)522 22 000
Fax: +46-(0)522 22 344

office@starkearvid.se
www.starkearvid.se