

STARKE **ARVID**

Instructions for Use

Reinforcement Storage Stand



Dear Customer!

Thank you for choosing a STARKE ARVID® product.

We have more than 25 years of experience within the construction business. We develop, manufacture and sell equipment intended for professional material management. Starke Arvid's product assortment includes a total of 20 different products.


Browse in at www.starkearvid.se

General use and safety regulations:


- Maximum load must not be exceeded.
- Make sure that the load is securely fastened with clampers during transport.
- Check the lifting equipment before each lift.
- Distribute the weight evenly on the Stand.
- Under no circumstances may a person stand under the load.
- Use the necessary safety equipment.

General maintenance and care instructions:

- Check before use that there are no damages or rust to construction details.
- Check the welding joints at least once a year.
- Remove any outer rust and coat with anti-corrosive paint.
- Replace any worn or broken parts.
- Check the lifting rings with crack indicator spray.
- When unsure, contact Alia AB.

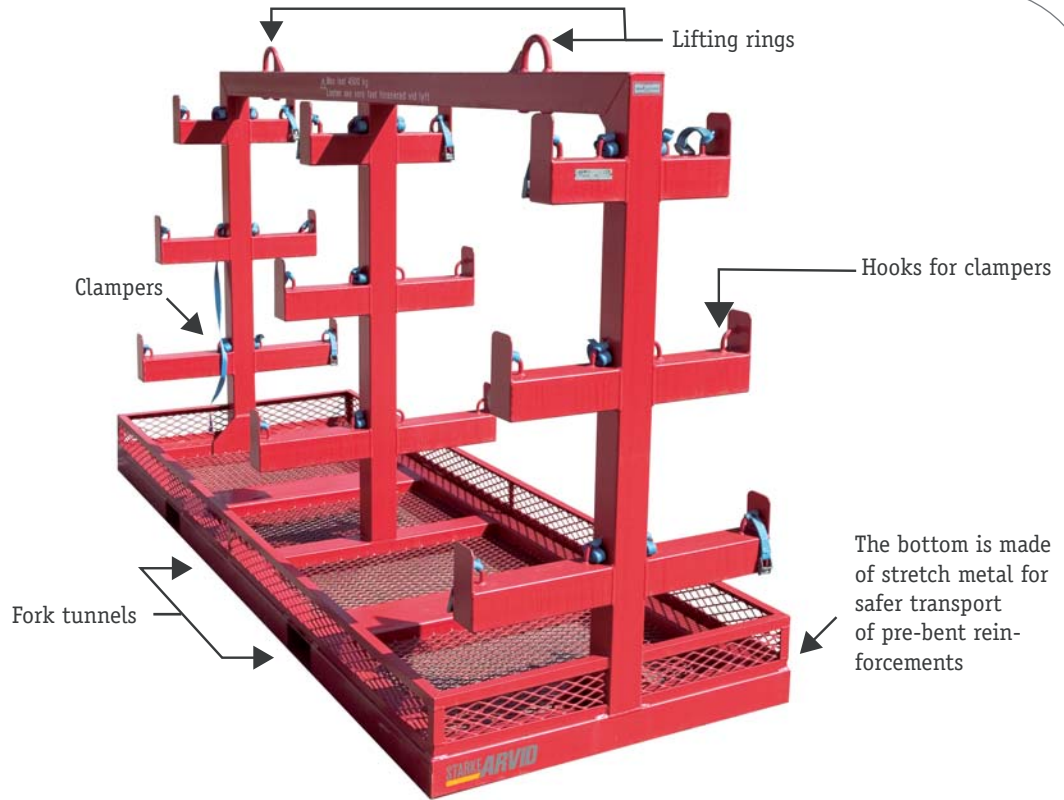

Bar Stand

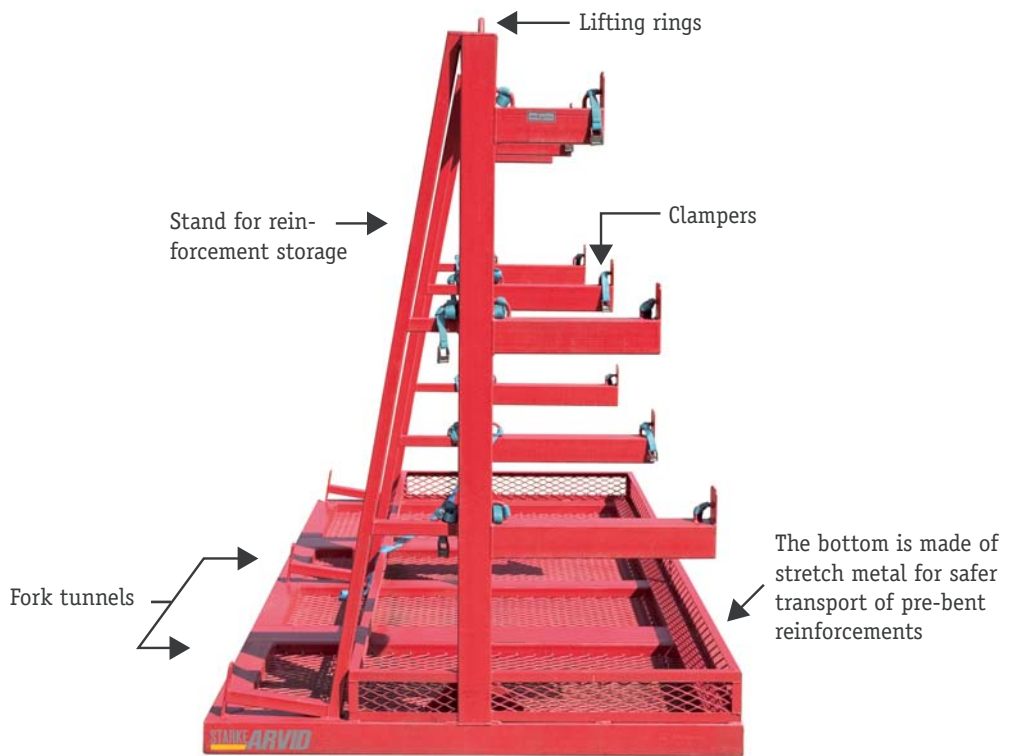

Dual-purpose Stand

Technical Data

Reinforcement Storage Stand

	Bar Stand	Dual-purpose Stand
Article no:	50245-23	50245-24
Maximum load:	4500 kg	4500 kg
Width:	1100 mm	1600 mm
Length:	3000 mm	3000 mm
Height:	1700 mm	2200 mm
Weight:	400 kg	450 kg

Service/Extra parts:

A number of retailers for STARKE ARVID® products are available for your basic security. If you have any questions regarding service or extra parts turn to you nearest retailer or directly to ALIA AB.

Gaurantee:

Under the condition that all instructions for use have been followed, we offer a one-year guarantee according to NL 01. The product may not be modified by the user.

*Produced and
marketed by:*

Alia AB
Box 93
SE-459 22 LJUNGSKILE

Phone: +46-(0)522 22 000
Fax: +46-(0)522 22 344

office@starkearvid.se
www.starkearvid.se