

STARKE **ARVID**

Instructions for Use

Platform Truck Mini/Midi



Dear Customer!

Thank you for choosing a STARKE ARVID® product.

We have more than 25 years of experience within the construction business. We develop, manufacture and sell equipment intended for professional material management. Starke Arvid's product assortment includes a total of 20 different products.



Browse in at www.starkearvid.se

General use and safety regulations:

- Maximum load must not be exceeded.
- Place the load centrally on the truck.
- Test the braking each time before use.
- Check for any outer damages to the tires.
- Check the air pressure of the tires.
- Use required safety equipment.

General maintenance and care instructions:

- All mobile parts should be greased once a month.
- Check all mobile parts as welding joints, wheels and other material at least once a year.
- Remove any rust and coat with anti-corrosive paint..
- Replace worn parts.
- When unsure, contact Alia AB.

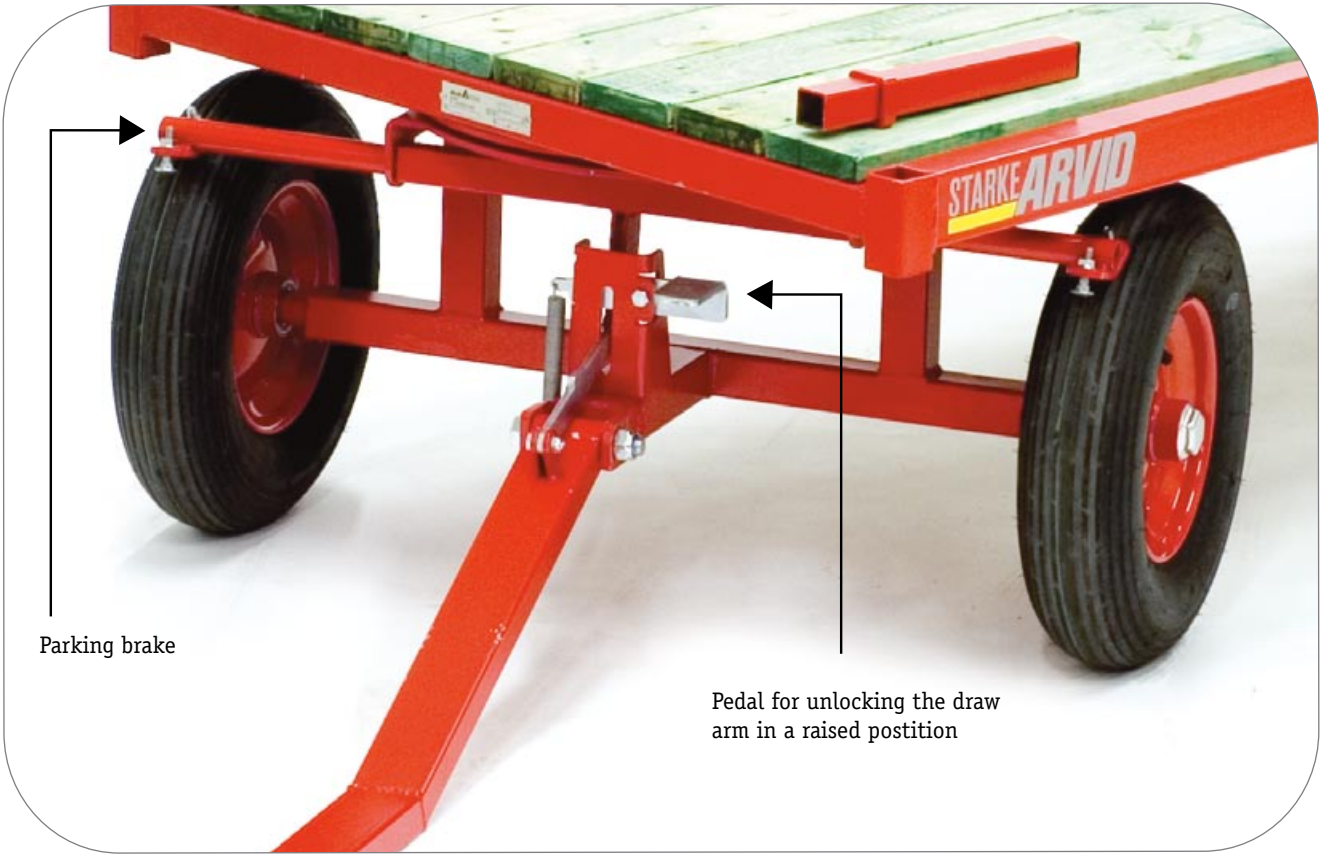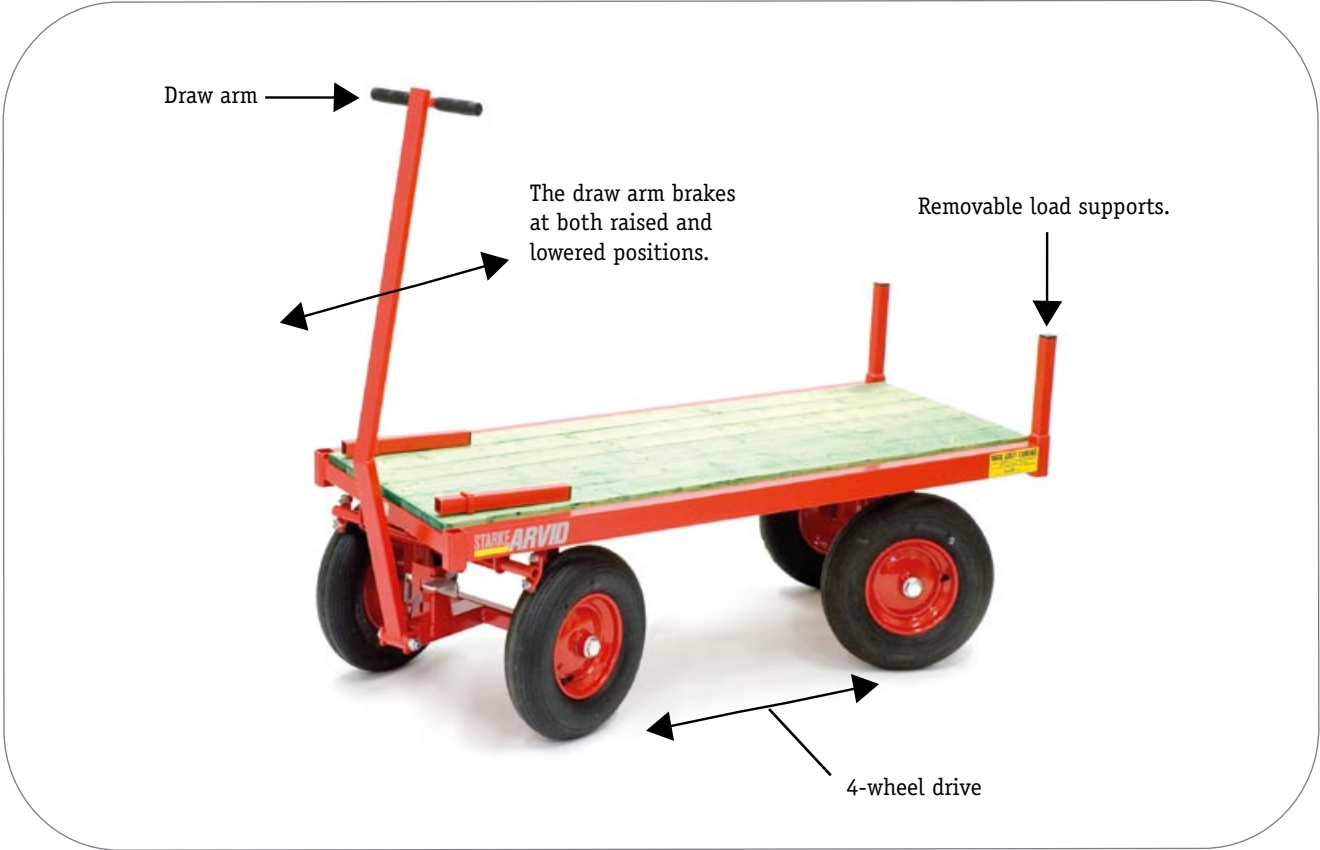

Technical Data

Platform Truck

	Mini	Midi	Extra Equipment:
Article no:	18100	18200	Polyurethane-filled wheel
Maximum load:	1000 kg	1000 kg	
Width, platform:	670 mm	900 mm	
Height:	510 mm	510 mm	
Length, platform:	1560 mm	2000 mm	
Drawbar length:	1100 mm	1350 mm	
Weight:	80 kg	100 kg	
Wheel (type):	(air rubber wheels with bearings or polyurethane-filled)		
	4 off. 4.00x8	4 off. 4.00x8	
	4-layered	4-layered	
Air pressure:	3,00 bar	3,00 bar	

Service/Extra parts:

A number of retailers for STARKE ARVID® products are available for your basic security. If you have any questions regarding service or extra parts turn to you nearest retailer or directly to ALIA AB.

Gaurantee:

Under the condition that all instructions for use have been followed, we offer a one-year guarantee according to NL 01.
The product may not be modified by the user.

*Produced and
marketed by:*

Alia AB
Box 93
SE-459 22 LJUNGSKILE

Phone: +46-(0)522 22 000
Fax: +46-(0)522 22 344

office@starkearvid.se
www.starkearvid.se