

STARKE **ARVID**

Instructions for Use

Tool Chest



Dear Customer!

Thank you for choosing a STARKE ARVID® product.

We have more than 25 years of experience within the construction business. We develop, manufacture and sell equipment intended for professional material management. Starke Arvid's product assortment includes a total of 20 different products.


Browse in at www.starkearvid.se

General use and safety regulations:

- Maximum load must not be exceeded.
- Use the necessary safety equipment.
- Be careful of pinning damages when closing the lid.

General maintenance and care instructions:

- All mobile parts must be greased once a month.
- Check all mobile parts as well as welding joints, wheels and other material at least once a year.
- Remove any outer rust and coat with anti-corrosive paint..
- Replace worn parts.
- When unsure, contact Alia AB.

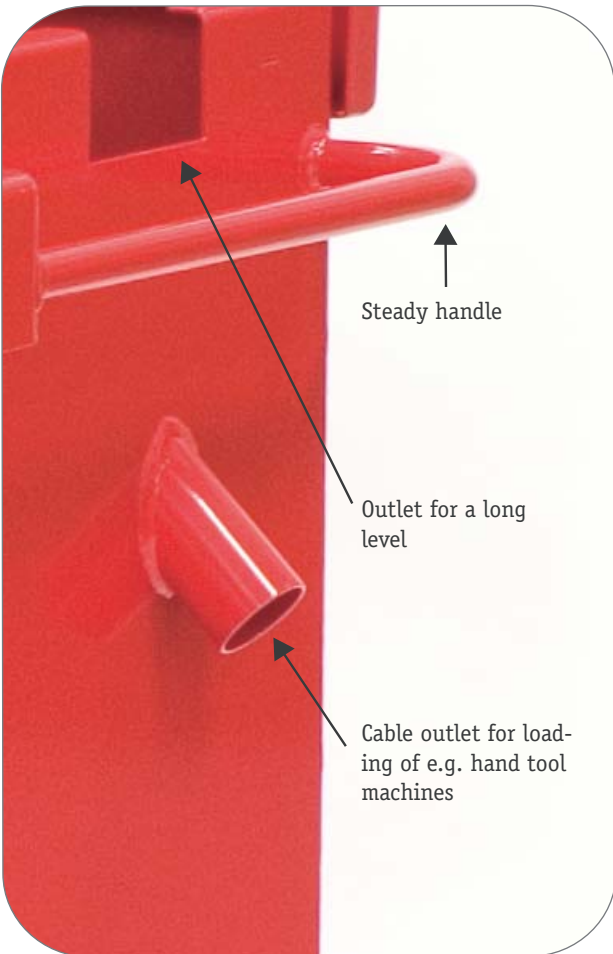

Technical Data

Tool Chest

	Midi	Maxi	Extra Equipment:
Article no:	36000	36100	Lifting rings
Maximum load:	500 kg	500 kg	
Width:	650 mm	650 mm	
Height wheels incl.:	785 mm	1000 mm	
Length:	1200 mm	1200 mm	
Weight:	110 kg	115 kg	
Volume:	360 l	450 l	
Wheels (type):	(dubble braked castors with bearings)		
	2 off. 160 mm	2 off. 160 mm	
	2 off. 160 mm braked	2 off. 160 mm braked	

Service/Extra parts:

A number of retailers for STARKE ARVID® products are available for your basic security. If you have any questions regarding service or extra parts turn to you nearest retailer or directly to ALIA AB.

Gaurantee:

Under the condition that all instructions for use have been followed, we offer a one-year guarantee according to NL 01. The product may not be modified by the user.

Produced and marketed by:

Alia AB
Box 93
SE-459 22 LJUNGSKILE

Phone: +46-(0)522 22 000
Fax: +46-(0)522 22 344

office@starkearvid.se
www.starkearvid.se