


Lift Truck 3.0

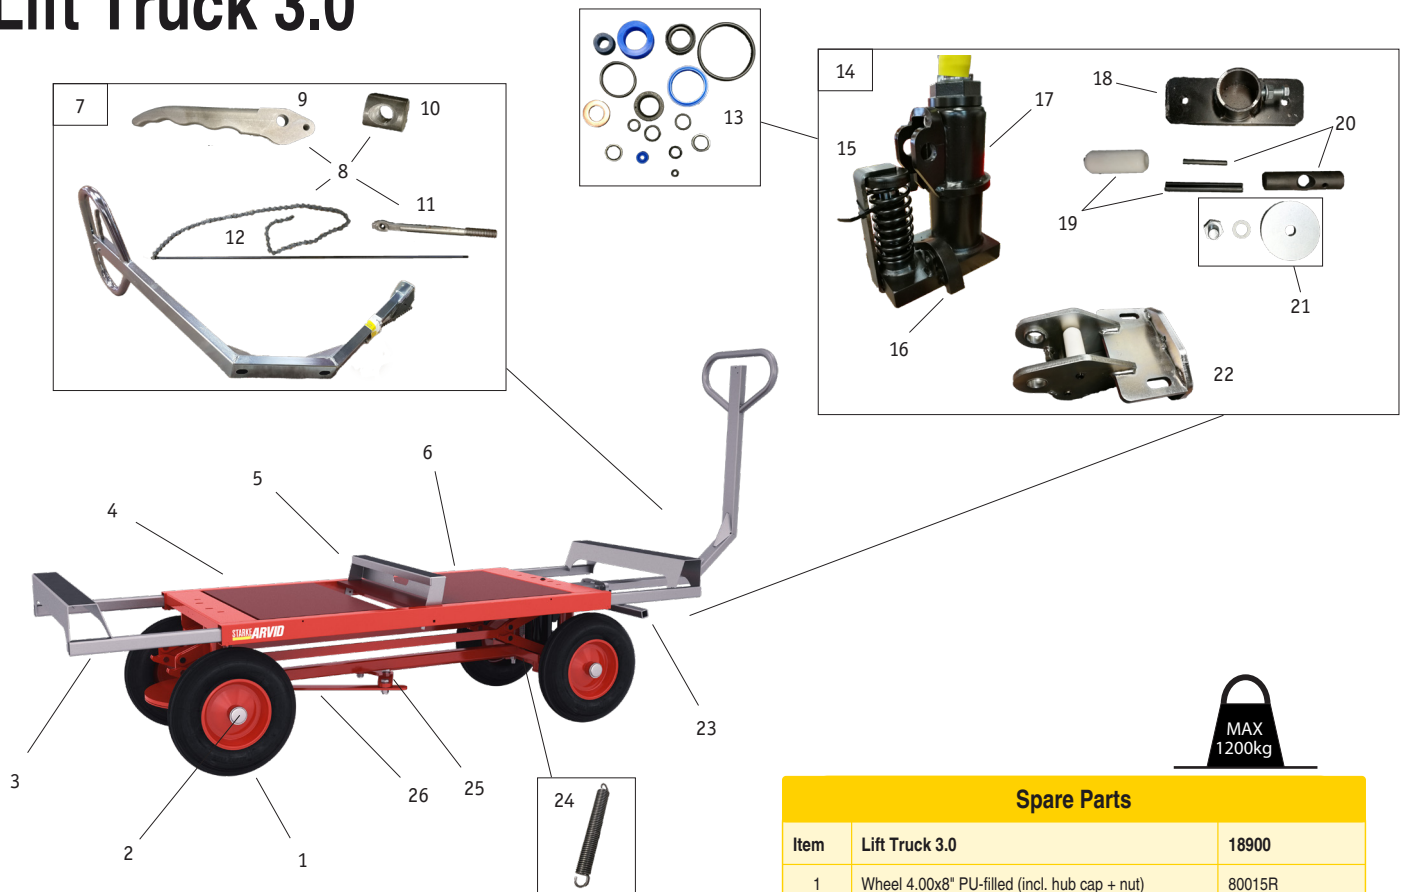

General maintenance and care instructions:

- Lubricate all moving parts once a month.
- Inspect all moving parts, welds, wheels and other components at least once a year.
- Remove any surface rust and touch up the paint.
- Replace worn parts.
- If in doubt, contact Starke Arvid AB.

Use/Safety:

- Check the brake and tyres before each use.
- Take particular care when travelling downhill with a full load.
- Beware of the crushing hazard when folding up the support bars.
- Do not exceed the maximum load.
- Position the load centrally on the trolley.
- Wear appropriate personal protective equipment.
- When lifting with a wheel loader or crane, place forks or slings only under the load bed frame to prevent damage to the tie rods and material supports.
- Lift the trolley only when fully raised to prevent air from entering the hydraulic system.

Spare Parts

Item	Lift Truck 3.0	18900
1	Wheel 4.00x8" PU-filled (incl. hub cap + nut)	80015R
2	Hub cap	90502
3	Support bar (material support)	18926R
4	Load bed panel 415x598	18934
5	Folding centre support (material support)	18922R
6	Load bed panel 615x598	18933
7	L-8 towing handle, complete, assembled	18925
<i>Includes items 8-12</i>		
8	Lowering handle, complete (incl. items 9-12)	93235R
9	Lowering handle	93235
10	Special nut for lowering handle	93396
11	Chain bracket/shaft, complete	93394R
12	Lowering rod + chain	93635R
13	Hydraulic seal kit	93109
14	Hydraulic unit incl. drawbar bracket	18497
<i>Consists of items 15-22</i>		
15	Hydraulic unit	93242
16	Lowering valve lever	92914R
17	Hydraulic oil plug	93656
18	L-8 piston bracket, spare part	18708R
19	Nylon roller, spare part	93234R
20	Drawbar bracket shaft	93324R
21	L-8 end washer, complete	18462R
22	Drawbar bracket, complete (incl. items 22, 19-20)	18722R
23	L-8 brake, spare part	18713R
24	Spring SF-DF 3515	92882
25	Centre tie rod	18913R
26	Tie rod	18914R